

Food Disposals

Turn on disposal to test. Turn OFF disposal before any actions listed below.

Broken disposal noises (3 stages):

- 1) Silent = Tripped breaker (which also indicates jammed object)
 - Press red button to reset
- 2) Buzzing = Jammed object (may result in loose object)
 - Force bottom plate to spin with hex key or wooden handle
- 3) Rattling = Loose object
 - Remove object
- 4) Normal, but won't drain = Clog in pipe below disposal
 - Snake drain below disposal

Vacuums

- 1) Bags & Filters
 - a) Replacing bag
 - b) Replacing post filter
 - c) Dirt over motor filter
- 2) Clogs / Suction
 - a) Cleaning roller
 - b) Clog in clear plastic tube by roller
 - c) Hair pin or wrapper in flexible tube
 - d) Open cap at end of tube
- 3) Belt & Roller
 - a) Broken belt
 - b) Damaged roller
- 4) Thermal Reset / Power Issues
 - a) Thermal reset may trip to protect motor when vacuum is clogged
 - b) Break in electrical cord